

Video Guard configuration for Recorder

Make sure upgrade the Fw from the Hikvision website:

Back up configuration, recommend to reset recorder to default and configure or restore the backup .

Go to Alarm receiver setting, copy below VG url and paste.

http://192.168.14.30:2020/VGAlarmReceiver/Receiver.svc

Set the Heart beat to 30 Min (1800 Sec) as per VG requirement.

HI	VISION	Live View		Playba	:k	Picture	Appli	cation	Confi	guration
Ģ	Local	SNMP	Email	Platform	n Access	Alarm Receive	er Settings	Network	Service	802.1x
	System	Server	Address		http://192	2.168.14.30:202	0/VGAlaı 🥑			
Ð	Network	Heart E	Beat(S)		1800					
	Basic Settings	Alarm	Туре		Video Lo	ISS	~			
	Advanced Settings	Camer	a		[D1] EZ\	/IZ	~			
<u>0</u> .	Video/Audio	Interva	I		once		~			
1	Image				_					
Ë	Event		🗎 S	ave						
	Storage									

Keep More setting empty.

HIKVISION	Live View	Playback	Picture	Application	Configuration
🖵 Local	SNMP	Email Platform Access	Alarm Receiver S	Settings Network Se	ervice 802.1x Other
System	Alarm Ho	st IP			
Network	Alarm Ho	st Port 0		Kee	ep Empty
Basic Settings	Multicast	Address			
Advanced Sett	ings Video Do	wnload Bandwidth 262144	ļ	Kbps	
Video/Audio	Enabl	e IP Camera Occupation D	etection		
Image					
Event		🗎 Save			
Storage					



Config the Required event alarm.

\leftarrow	C 💿 🔺 N	ot secure 192.168.1	1.111/doc/page/	config.asp			
HIP	VISION	Live View Pl	layback	Picture	Application	Configuration	
Ţ	Local	Motion Video Tamp	pering Video Los	s Alarm Input	Alarm Output	Exception	
—	System	Exception Type	HDD Full				
Ð	Network	Normal Linkag	e Network Dis	connected			
<u>.</u> 20	Video/Audio	Audible Warning	9 Illegal Login				
1	Image	Send Email	Log Disk Ex	ception			
圁	Event	☑ Notify Surveillar	nce Cer HDD Low T	emperature			
	Basic Event		HDD Bad S HDD Sever	ector e Failure			
	Smart Event				_		
	Storage						
Ŕ	Vehicle Detection						

Config the Video loss alarm .

HIKVIS	TION Live Vi	ew Playback	Picture	Application	Configuration
🖵 Local	Motio	n Video Tampering Vide	Alarm Input	Alarm Output	Exception
E Syste	m Car	mera [D1] E2	ZVIZ	~	
🚱 Netw	ork 🔽	Enable Video Loss Detection			
Q. Video	/Audio A	rming Schedule 🔰 Linkage Me	thod		
🔝 Image	•] Normal Linkage	Trigger Alarm Ou	ıtput	
Even	t E] Audible Warning	□ A->1		
Basi	Event] Send Email			
Smar	t Event	Notify Surveillance Center			
🖺 Stora	ge 🗌] Full Screen Monitoring			

Don't Enable Hikconnect while connect with Video guard.

HIK	VISION	Live View	Playbad	ж	Picture	Application	Configuration
모	Local	SNMP Email	Platform	n Access	Alarm Receiver	Settings Network	Service 802.1x
	System	Platform Acces	s Mode	Hik-Conne	ect	\sim	
Ð	Network	Enable					
	Basic Settings	Server Address	5	litedev.sgp	hik-connect.com	m 🗌 Custom	
	Advanced Settings	Register Status	5	Online		\sim	
.Q.	Video/Audio	Stream Encryp	tion/Encry	•••••	,	hyper a	
14	Image	6 to 12 charac case sensitive	ters allowed combinatio	l, including on of this alp	upper-case and I habetical order a	ower-case letters, and are not allowed.	d digits. To ensure de
Ē	Event						
	Storage	8	Save				
50	Vehicle Detection			-			



Network NIC better to use LAN1 for Video Guard or make sure the default route selected

If VG is connected to LAN2 then select Default route as LAN 2

HIKVISION	Live View Playb	ack Picture	Application	Configuration
🖵 Local	TCP/IP DDNS PPF	PoE Port NAT		
E System	Working Mode	Multi-address	\sim	
Network	Lan1 Lan2			
Basic Settings	NIC Type	Auto	~	
Advanced Settings		DHCP		
Q. Video/Audio	IPv4 Address	192.168.1.64		
🔝 Image	IPv4 Subnet Mask	255.255.255.0	Ø	
🗮 Event	IPv4 Default Gateway		S	
🖺 Storage	IPv6 Mode	Route Advertisement	View Route	Advertisement
G Vehicle Detection	IPv6 Address	••		
CA VCA	Subnet Prefix Length	0		
🔚 Target Capture	IPv6 Default Gateway	**		
III IoT Channel Settings	Mac Address	bc:ad:28:e1:55:82		
	мти	1500	\sim	
	DNS Server			
		Auto DNS		
	Preferred DNS Server	8.8.8.8	0	
	Alternate DNS Server		S	
	Default Route	Lan1	\sim	

Enable NTP, Add the VG IP, Enable NTP LOCK.

9	Co	nfiguration		× 📑		0		
Fil	e	Edit View	Favorites	Tools Help				
ŀ		VISION		Live View	Playback	Picture	Application	Configuration
1	Ţ	Local		Basic Information	Time Settings	RS-232 RS-	485 Menu Output	About
		System		Time Zone	(GMT-	+04:00) Caucasus	Standard Time	~
Г		System Settings		Lock NTP				
1		Maintenance		NTP	-			
		Security		NTP				
		Camera Manager	ment	Server Address	192.16	8.14.30		
		User Managemer	nt	NTP Port	123			
>		Live View Setting	5	Interval	2		minute(s)	
(Ð	Network						
,	<u>0</u> .	Video/Audio		Manual Time	Sync.			
[14	Image		 Manual Time 	Sync.			
	=	Event		Device Time	2021-0	9-28116:54:32		
				Set Time	2021-0	09-28T16:54:23	📆 📃 Sync. with	h computer time



If any issue like Video guard not receive alarm, collect below log and share to Hikvision support team.

Enable VG log from Local GUI

NV	R 4.0			(d)		Q.	
i	System Info	~					
	Device Information		Customization Nu	mber	DZP20220909214		
	Camera		Internal Version		V4.40.015 build Feb	2 2023	
	Record		Enable VG LOG				
	Alarm						
	Natural						
	Network						
	HDD						
	Log Information						
B	Import/Export						
Ŷ	Upgrade	»	Apply				
@	Default						
	Network	>					
and the second second							

Go to Log, search VG Network information, Export.

NV	/R 4.0			×
i	System Info	>	Time 2023-02-02 00:00:00 🛱 . 2023-02-02 23:59:59 🛱 Search	
B	Import/Export		Major Type All *	
Ŷ	Upgrade	>	Minor Type Select All	
0	Default		NetHDD Information	
	Network	>	System Running Status	
<u>a</u>	HDD Operation	,	ANR Record Stopped	
Q	System Service	>	Add IP Camera ANR Time Duration	
			CIVIL Cloud Running Status	
			IP Camera Connection Information	
			VG Network Information	
			IP Camera Connection Status	
Se int			Double Verification Record	
0.000			HDD Formatting Started	
			HDD Formatting Ended	
1.			Rebuild Database Started	
			Rebuild Database Finished	
			□802.1x Verification Succeeded	
			□802.1x Verification Failed	

If the log is empty, collect the log using below step and sent to us.

Firmware, which have latest build, which support Capture Packet by USB Flash Drive.

Attach a USB to NVR / DVR, Make sure USB is detected by device

Go to Configuration – Maintenance – Diagnose

Add IP of VG in the Filtering parameter

Select LAN interface where VG connected



Click start Capture and Click SAVE. Once it start capture show YES.

Trigger all alarm. 1. Video Loss. 2. Video Reconnect. 3. HDD Full. 4. HDD Error.

For The Recorder Online, offline not sent by device. Its generate from Heartbeat, So no configuration in device.

Network Interface	Lan1	~
Capture Packet Data.	Yes	S

If USB not detect it, give below error

	1
Note	×
No USB flash drive is detected. Insert USB flash drive again.	

Log file should start capturing from starting of Recorder to VG, Generate alarm like video loss.



Once All Alarm tested. Click SAVE, Click STOP capture and Click SAVE. You will find similar File in USB, please sent us to verify.

010	2021_07_13_	_07_48_57
010	2021_07_13_	_07_50_05

 7/13/2021 7:49 AM
 Wireshark capture...
 47,746 KB

 7/13/2021 7:50 AM
 Wireshark capture...
 6,590 KB